

Quick Setup Guide Digital Clock Radio with FM | I NS-CLOPP1


Congratulations on your purchase of a high-quality Insignia product. Your NS-CLOPP1 represents the state of the art in digital clock radio design and is designed for reliable and trouble-free performance.

Package contents


- Digital Clock Radio with FM
- AC/DC power adapter
- Quick Setup Guide
- User Guide



Top view / controls

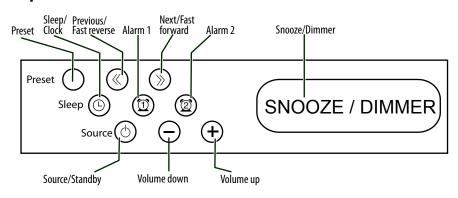

Back view

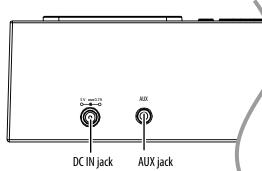

Installing the backup batteries

- **1** While pressing the release latch on the battery compartment cover on the bottom of your radio, lift the cover off your radio.
- 2 Insert two AAA batteries (not included) into the battery compartment. Make sure that the + and symbols on the batteries align with the + and symbols inside the compartment.
- **3** Insert the tab on the cover into the slot in the battery compartment, then press the cover down until it clicks into place.

O GAAA D AAA D AAA D

LCD screen



Connecting the AC/DC adapter

- 1 Plug the small connector on the power adapter into the **DC IN** jack on the back of your radio.
- **2** Plug the other connector on the power adapter into a power outlet.

Setting the time

- 1 Press **Sleep** (5) for about two seconds until the hour digits blink on the LCD.
- 2 Press + or > to increase the hour or press or < to decrease the hour. Make sure that AM or PM displays correctly.
- **3** Press **Sleep** (a) again. The minutes digits blink on the LCD.
- **4** Press \oplus or to increase the minutes or press \bigcirc or to decrease the minutes.
- **5** Press **Sleep** (a) again to save the time setting and exit time setting mode.

Setting the alarm sound

- 1 Press ((Alarm 1) or ((Alarm 2)). The ((1) or ((2) or ((2) or blinks on the LCD.
- 2 To use the radio as the alarm sound, press (1) (Alarm 1) or (2) (Alarm 2) once. Wait three seconds to save the setting and exit alarm sound setting mode.

 OR
 - To use the buzzer as the alarm sound, press (alarm 1) or (alarm 2) twice. Wait three seconds to save the setting and exit alarm sound setting mode.
- 3 To completely turn off the alarm, press ((Alarm 1) or ((Alarm 2) repeatedly until the ((Larm 1) or ((Larm 2) repeatedly until the ((Larm 1) or ((L

Setting the alarm time

- **1** Press and hold (12) (Alarm 1) or (22) (Alarm 2) for about two seconds until the hour digits blink on the LCD.
- **2** Press \oplus or to increase the hour or press \bigcirc or to decrease the hour.
- **3** Press ⁽¹⁾ (Alarm 1) or ⁽²⁾ (Alarm 2) again. The minutes digits blink on the LCD.
- **4** Press ⊕ or ⊗ to increase the minutes or press ⊖ or ⊗ to decrease the minutes.
- **5** Press ((Alarm 1) or ((Alarm 2) again. The **Volume** icon appears in the center of the LCD and the volume digits blink.

- **6** Press ⊕ or ③ to increase the alarm volume or press ⊖ or ≪ to decrease the alarm volume.
- **7** Press ((alarm 1)) or ((alarm 2)) again to save the time setting and exit alarm setting mode.

Turning off your alarm

• Press any button but SNOOZE/DIMMER).

Using the snooze feature

• When the alarm sounds, press (SNOOZE/DIMMER). The alarm turns off for 10 minutes and **SNOOZE** appears on the LCD.

Setting the sleep timer

- Press Sleep © repeatedly to select the amount of time you want your radio to wait before it turns off automatically. You can select 15, 30, 45, 60, or 90 minutes. The time you select and the SLEEP © icon appear on the LCD.
- To turn off the sleep timer, press **Sleep** (repeatedly until **00** appears and the **SLEEP** icon disappears.

Connecting an audio device

- 1 Plug an audio cable with a 3.5 mm connector (not included) into the **AUX IN** jack on the back of your radio and into the audio out jack on your audio device.
- 2 Press **Source (b)** to turn on your radio, then press **Source (c)** repeatedly until **AUX** appears on the LCD.
- **3** Use the controls on the audio device to control playback.

Playing your radio

- **1** Make sure that you have connected the AC power adapter.
- **2** Press **Source (b)**. Your radio turns on.
- **3** Press @ or @ to manually select a radio frequency. OR
- Press and hold @or Dto automatically tune to the next lower or higher radio station.
- **4** Press \oplus or \bigcirc to increase or decrease the volume.
- **5** To turn off your radio, press and hold **Source (b)** for two seconds.

For more information about using your radio, see your *User Guide*.

90-day limited warranty

See your *User Guide* or visit <u>www.insigniaproducts.com</u> for details. © 2013 BBY Solutions, Inc. All rights reserved.